
Installation & Disposal Guidelines

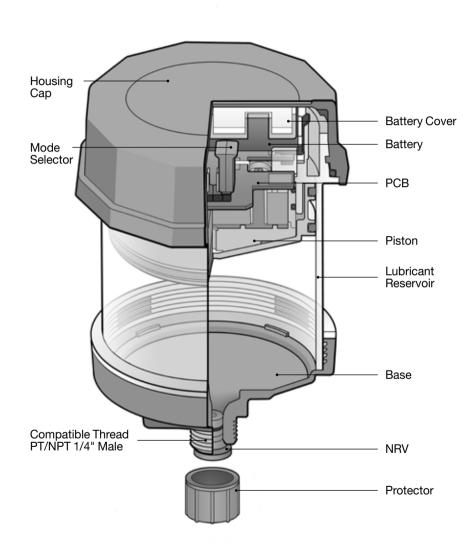





Fill oil into the empty unit using appropriate tools. (2)




Once the unit is filled, insert the Non Return Valve (NRV) before installation.

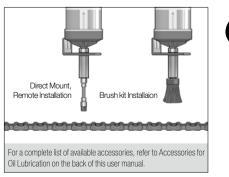

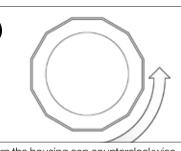

Turn the housing cap counterclockwise to unscrew the cap.

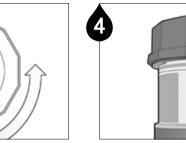

Put the cap back on and turn it clockwise until the cap is securely locked in place.




Pull out the yellow Mode Selector from the default OFF position.



Firmly push the Mode Selector into the slot of the desired dispensing period.




Log the installation date and the scheduled date of lube cycle completion on the label of the Pulsarlube EO. Note Please note there is a delay before the unit starts dispensing oil. It can take up to 3 weeks for enough gas to generate to start dispensing depending on the monthly setting and installation conditions.

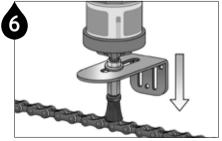


Install the unit on the lube point using appropriate adapters.
Note Do not excessively tighten the Pulsarlube EO

Note Do not excessively tighten the Pulsarlube EO as it may result in damage to the tip of lubricator.


Installation Precautions

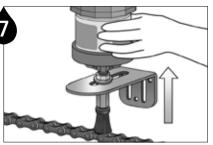


When the selected dispensing period of the Pulsarlube EO has completed, remove the lubricator from the application.

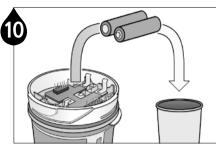


Remove the batteries.

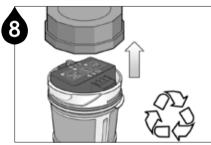


The Pulsarlube EO is an eco-friendly product that can be recycled. Turn the housing cap counterclockwise to disassemble the product for proper disposal.

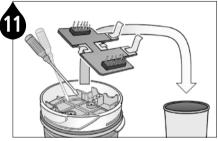


Using a hand tool such as a flat-head screwdriver, detach the PCB from the unit.

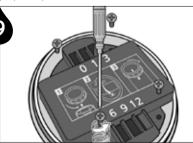


Unscrew to remove the battery cover.

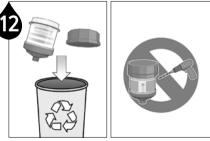

Dispose of remaining plastic components complying with local regulations for recycling. Warning Do not cut, puncture, or reuse lubricator. Avoid high backpressure. The backpressure at the tip of lubricator must be under 5bar.

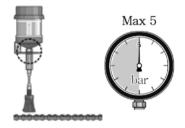


When installing the unit at a 45° angle or greater, use an adapter with 1/4" or bigger thread if the total weight of the unit and accessories exceeds 1kg.

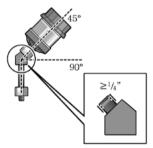

For remote installation using a Ø4 tube, keep the maximum distance at 3m (10ft) or less.



Product Certifications

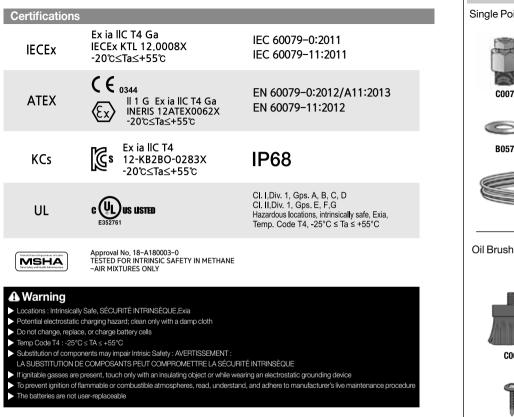




Warning

For oils below ISO VG 100, place the oiler below the lube point and twist the lube line a couple of times to avoid oil leaks caused by gravity.

Note

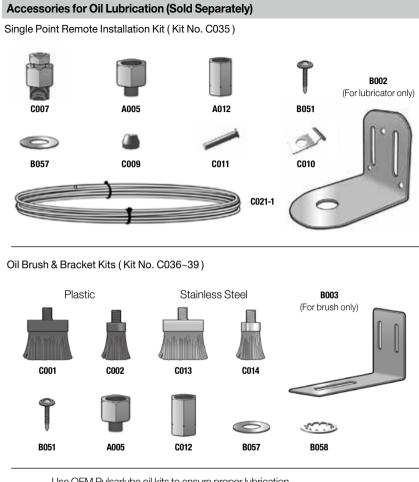

FUL/ARLUBE The World Leader of Automatic Lubrication

Use OEM Pulsarlube oil kits to ensure proper lubrication To download installation manuals, please visit our website at www.pulsarlube.com Products
Installation Kits
Oil Lubrication

Shelf life and Product Warranty Warranty is limited to original defects in material and workmanship and will not cover any collateral damage due to mishandling, abuse and /or any other inappropriate use of this product. Warranty period is 1 year from the date of purchase.

Pulsarlube USA. Inc. 1480 Howard Street, Elk Grove Village, IL 60007, USA TEL:1-847-593-5300 FAX:1-847-593-5303 www.pulsarlube.com/info@pulsarlube.com

Rev.00



